



INSTALLATION INSTRUCTIONS

Part Number 57-0571

Mazda 323V 1.5L L4, DOHC 1994–1998

1. Disconnect the negative battery terminal.
2. Unclip the electrical connector from the Mass Air Sensor (MAS). (Fig. 1)
3. Remove the temperature sensor from the air box lid. (Fig. 2)
4. Unclip the intake hose from the MAS. (Fig. 3)
5. Unbolt and remove the complete air box assembly from the vehicle. (Fig. 4)
6. Unscrew the air box-mounting stud from the battery tray. (Fig. 5)
7. Carefully expand the flexi cold air hose and pierce/drill 2 holes in one of the plastic ends.
8. Feed the pierced end of the cold air hose down below the under tray and back up behind the front grill, secure to the front grill using 2 of the plastic ties supplied. (Fig. 6)
9. Secure the cold air hose to the original air box intake hose using the plastic ties supplied. (Fig. 7)
10. Assemble the saddle bracket and mounting bracket using the Hardware supplied. (Fig. 8)
11. Using the original air box mounting bolt secure the mounting bracket assembly to the battery tray as shown. (Fig. 9)
12. Unbolt and remove the MAS from the air box lid. (Fig. 10)
13. Fit the MAS into the intake hose and firmly tighten the original hose clip. (Fig. 11)
14. Fit the stepped adaptor onto the MAS and secure using the #40 hose clip supplied. (Fig. 12)
15. Fit the adaptor tube into the stepped adaptor and secure using the #44 hose clip supplied. (Fig. 13)
16. Fit the rubber filter adaptor onto the adaptor tube. (Fig. 14)
17. Fit the #64 hose clamp around the saddle bracket. (Fig. 15)
18. Fit the air filter neck through the hose clamp on to the rubber filter adaptor and firmly tighten the clamp. (Fig. 16)
19. Fit the temperature sensor in to the small hole in the filter base. (Fig. 17)
20. Reconnect the electrical sensor to the MAS. Fig. 18)
21. Position the end of the cold air hose towards the air filter to finish approximately 4"/10 cm away, secure in position using a plastic tie supplied.
22. Reconnect the negative battery terminal.
23. Carry out a final height / alignment check of the kit fitment, installation is now complete.

Parts list:

- 1 x Chrome Lid Air filter.
- 1 x Rubber Adaptor.
- 1 x Stepped Adaptor.
- 1 x Adaptor Tube.
- 1 x Cold Air Hose Assembly.
- 1 x Literature Pack.

Fixing Kit: -

- 1 x Saddle Bracket.
- 1 x Mounting Bracket.
- 1 x Countersunk Bolt.
- 1 x Flat Metal Washer.
- 1 x Conical Washer.
- 1 x Nylock Nut.
- 4 x Plastic Ties.
- 1 x #64 Hose Clip.
- 1 x #48 Hose Clip.
- 1 x #40 Hose Clip.

WARNING: Before starting the engine carry out a final fitment check of the K&N performance kit. It will be necessary for all intake systems to be checked periodically for realignment, clearance and tightening of all connections. Failure to follow the above instructions or proper maintenance may void the warranty.

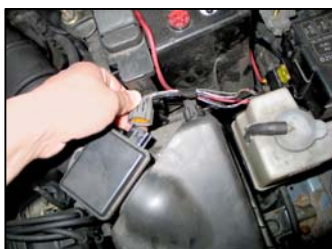


Fig. # 1



Fig. # 2



Fig. # 3



Fig. # 4



Fig. # 5



Fig. # 6



Fig. # 7

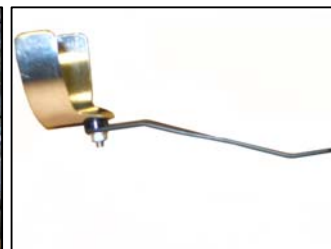


Fig. # 8

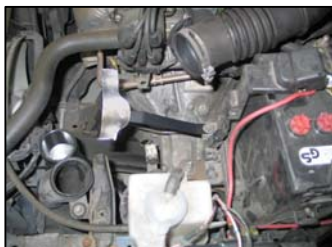


Fig. # 9



Fig. # 10



Fig. # 11

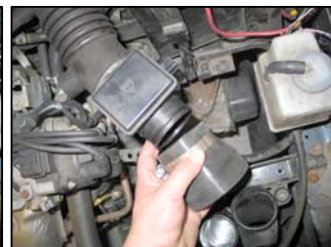


Fig. # 12



INSTALLATION INSTRUCTIONS

Part Number 57-0571



Fig. # 13



Fig. # 14



Fig. # 16

